

How to Use Xfinity X1



How it works



TV input (Top Left) – Controls the input of the TV.

LED Light (Middle Top)- Glows blue when the mic on remote is being pushed. Glows Red when its time to change out batteries.

Power (Top Right)- Controls the power of the TV and Audio system.

<< - rewind feature either during movie or on demand.

>> - fast forward feature during movie or on demand.

Exit- By pushing the exit button it will get you out of everything.

Red Dot- The red dot in the middle of the remote will allow you record instantly.

PG UP- while in the guide it will allow to go 5 channels up page by page.

PG Down- same as PG Up but going down page by page.

Guide Button- Allows you to preview channels. By pressing the Guide button 2x's you can customize how you view your guide.

Xfinity button-Allows you to access search/apps/settings/On Demand.

A Button-self help button that allows you to troubleshoot the cable box. Also has help videos on better understandings product and features.

B button- accessibility settings such as close captions and voice guidance.

C button- Access sports app and to view scores without actually changing channel.

D Button- works with the back arrow button. Deletes your history on the last viewed channels.

Voice Button- allows you to access the X1 system without hitting any other button. Simply hold the voice button until the led light on top of remote is blue or TV says “Listening”, say a command then release the button.

I Button- allow you to access the info about the channel or program.

Pairing remote to TV And Audio System

- 1.** Turn on your TV.
- 2.** Press and hold the **xfinity** and **Mute** buttons together for five seconds until the light at the top changes from red to green.
- 3.** Type the first five-digit code for the TV manufacturer
 - If the remote light blinks green twice, the code is correct
 - If the remote light blinks red then green, the code is incorrect.
- 4.** Aim the remote at the TV, and press the **Power** button
 - If the TV turns off, turn the TV back on and make sure the Volume and Mute buttons work.
 - If the TV doesn't turn off, try the next code.